



5420B

Ex Power Supply

No. 5420BV102-UK From ser. no.: 030145001







- DK PR electronics A/S tilbyder et bredt program af analoge og digitale signalbehandlingsmoduler til industriel automation. Programmet består af Isolatorer, Displays, Ex-barrierer, Temperaturtransmittere, Universaltransmittere mfl. Vi har modulerne, du kan stole på i selv barske miljøer med elektrisk støj, vibrationer og temperaturudsving, og alle produkter opfylder de strengeste internationale standarder. Vores motto »Signals the Best« er indbegrebet af denne filosofi - og din garanti for kvalitet.
- UK PR electronics A/S offers a wide range of analog and digital signal conditioning devices for industrial automation. The product range includes Isolators, Displays, Ex Interfaces, Temperature Transmitters, and Universal Devices. You can trust our products in the most extreme environments with electrical noise, vibrations and temperature fluctuations, and all products comply with the most exacting international standards. »Signals the Best« is the epitome of our philosophy - and your guarantee for quality.
- FR ▶ PR electronics A/S offre une large gamme de produits pour le traitement des signaux analogiques et numériques dans tous les domaines industriels. La gamme de produits s'étend des transmetteurs de température aux afficheurs, des isolateurs aux interfaces SI, jusqu'aux modules universels. Vous pouvez compter sur nos produits même dans les conditions d'utilisation sévères, p.ex. bruit électrique, vibrations et fluctuations de température. Tous nos produits sont conformes aux normes internationales les plus strictes. Notre devise »SIGNALS the BEST« c'est notre ligne de conduite et pour vous l'assurance de la meilleure qualité.
- DE PR electronics A/S verfügt über ein breites Produktprogramm an analogen und digitalen Signalverarbeitungsgeräte für die industrielle Automatisierung. Dieses Programm umfasst Displays, Temperaturtransmitter, Ex- und galvanische Signaltrenner, und Universalgeräte. Sie können unsere Geräte auch unter extremen Einsatzbedingungen wie elektrisches Rauschen, Erschütterungen und Temperaturschwingungen vertrauen, und alle Produkte von PR electronics werden in Übereinstimmung mit den strengsten internationalen Normen produziert. »Signals the Best« ist Ihre Garantie für Qualität!

EX POWER SUPPLY

PRepower 5420B

Table of contents

Warning	2
Symbol identification	3
Safety instructions	3
How to demount system 5000	5
Application	6
Technical characteristics	6
Mounting / installation	6
Application	7
Order: 5420B	8
Electrical specifications	8
Connections	10
Block diagram	11

WARNING



GENERAL

This device is designed for connection to hazardous electric voltages.

Ignoring this warning can result in severe personal injury or mechanical damage.

To avoid the risk of electric shock and fire, the safety instructions of this manual must be observed and the guidelines followed. The specifications must not be exceeded, and the device must only be applied as described in the following.

Prior to the commissioning of the device, this manual must be examined carefully.

Only qualified personnel (technicians) should install this device. If the equipment is used in a manner not specified by the manufacturer, the protection provided by the equipment may be impaired.



HAZARD-OUS VOLTAGE



WARNING

Until the device is fixed, do not connect hazardous voltages to the device.

The following operations should only be carried out on a disconnected device and under ESD-safe conditions:

Dismantlement of the device for setting of DIP-switches and jumpers.

General mounting, wire connection and disconnection. Troubleshooting the device.

Repair of the device and replacement of circuit breakers must be done by PR electronics A/S only.



INSTAL-LATION

WARNING!

SYSTEM 5000 must be mounted on DIN rail according to DIN 46277.

The communication connector of SYSTEM 5000 is connected to the input terminals on which dangerous voltages can occur, and it must only be connected to the programming unit Loop Link by way of the enclosed cable.

SYMBOL IDENTIFICATION



Triangle with an exclamation mark: Warning/demand. Potentially lethal situations.



CE The CE mark proves the compliance of the device with the essential requirements of the directives.



The double insulation symbol shows that the device is protected by double or reinforced insulation.



Ex devices have been approved acc, to the ATEX directive for use in connection with installations in explosive areas.

SAFETY INSTRUCTIONS

DEFINITIONS

Hazardous voltages have been defined as the ranges: 75 to 1500 Volt DC, and 50 to 1000 Volt AC.

Technicians are qualified persons educated or trained to mount, operate, and also trouble-shoot technically correct and in accordance with safety regulations. **Operators**, being familiar with the contents of this manual, adjust and operate the knobs or potentiometers during normal operation.

RECEIPT AND UNPACKING

Unpack the device without damaging it and make sure that the manual always follows the device and is always available. The packing should always follow the device until this has been permanently mounted.

Check at the receipt of the device whether the type corresponds to the one ordered

ENVIRONMENT

Avoid direct sun light, dust, high temperatures, mechanical vibrations and shock, and rain and heavy moisture. If necessary, heating in excess of the stated limits for ambient temperatures should be avoided by way of ventilation.

All devices fall under Installation Category II, Pollution Degree 1, and Insulation Class II.

MOUNTING

Only technicians, who are familiar with the technical terms, warnings, and instructions in the manual and who are able to follow these, should connect the device. Should there be any doubt as to the correct handling of the device, please contact your local distributor or, alternatively,

PR electronics A/S www.prelectronics.com

Mounting and connection of the device should comply with national legislation for mounting of electric materials, i.e. wire cross section, protective fuse, and location. Descriptions of input/output and supply connections are shown in the block diagram and side label.

The following apply to fixed hazardous voltages-connected devices:

The max. size of the protective fuse is 10 A and, together with a power switch, it should be easily accessible and close to the device. The power switch should be marked with a label telling it will switch off the voltage to the device.

Production year can be taken from the first 2 digits of the serial number.

CALIBRATION AND ADJUSTMENT

During calibration and adjustment, the measuring and connection of external voltages must be carried out according to the specifications of this manual. The technician must use tools and instruments that are safe to use.

NORMAL OPERATION

Operators are only allowed to adjust and operate devices that are safely fixed in panels, etc., thus avoiding the danger of personal injury and damage. This means there is no electrical shock hazard, and the device is easily accessible.

CLEANING

When disconnected, the device may be cleaned with a cloth moistened with distilled water.

LIABILITY

To the extent the instructions in this manual are not strictly observed, the customer cannot advance a demand against PR electronics A/S that would otherwise exist according to the concluded sales agreement.

HOW TO DEMOUNT SYSTEM 5000

First, remember to demount the connectors with hazardous voltages.



Picture 1:

By lifting the bottom lock, the device is detached from the DIN rail.



Picture 2:

Then, by lifting the upper lock and pulling the front plate simultaneously the PCB is removed.

Switches and jumpers can now be adjusted.

EX POWER SUPPLY

PRepower 5420B

- 2 channels
- 5-port 3.75 kVAC galvanic isolation
- Output voltage > 18 V to Ex area
- · Active current loop detection
- Universal supply by AC or DC

Application

- Voltage supply with safety barrier for the supply of equipment mounted in hazardous area.
- Voltage supply with failsafe detection of active current loop from 2-wire transmitters mounted in hazardous area.

Technical characteristics


- PR5420B has a relay with change-over contacts available in the safe area. When the loop current is within the defined limit, the relay is ON.
- Supply and outputs are floating and galvanically separated.

Mounting / installation

Mounted vertically or horizontally on a DIN-rail. Up to 84 channels per metre
can be mounted.

APPLICATION

2-wire transmitter Loop alarm Supply

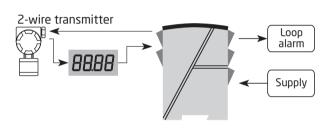

Type Channels 5420B : 2

Electrical specifications

Specification range:20°C to +60°C Common specifications:
Fuse
EMC - immunity influence
Max. wire size

Max. wire size	1 x 2.5 mm ² stranded wire
Screw terminal torsion	0.5 Nm
Relative humidity	< 95% RH (non-cond.)
Dimensions (HxWxD)	109 x 23.5 x 130 mm
DIN-rail type	DIN 46277
Protection degree	IP20
Weight	215 g

ını	nı	14.
ш	μυ	ıı.

Input:	
Supply voltage universal	21.6253 VAC
	5060 Hz
	19.2300 VDC
Internal consumption	
Max. consumption	≤ 4 w (∠ channels)
Outputs:	401/05 : 00 4
Output voltage	
Output current per channel (max.)	28 MA
Relay outputs:	
ON within limit	> 3.8< 20.5 mA
Vmax	
Imax	
Max. AC output Max. load at 24 VDC	
	IA
EEx / I.S. approval:	
DEMKO 99ATEX126256	⟨£x⟩ (1) GD
	[EEx ia] IIC
Applicable for zone	0, 1, 2, 20, 21 or 22
Ex / I.S. data:	
U _m	: 250 V
U ₀	: 28 VDC
l ₀	: 93 mADC
P ₀	: 0.65 W
L ₀	: 3 mH
C ₀	: 0.08 µF
GOST R approval:	
VNIIM & VNIIFTRI, Cert. no	See www.prelectronics.com
Observed authority requirements:	Standard:
EMC 2004/108/EC	EN 61326-1
LVD 2006/95/EC	EN 61010-1
PELV/SELV	IEC 364-4-41 and EN 60742
ATEX 94/9/EC	EN 50014, EN 50020 and
	EN 50281-1-1

CONNECTIONS

Supply:



Safe area:

12 Channel 1

Loop alarm

11 12 13

0 0 0

Channel 2




Outputs for Ex area:







BLOCK DIAGRAM

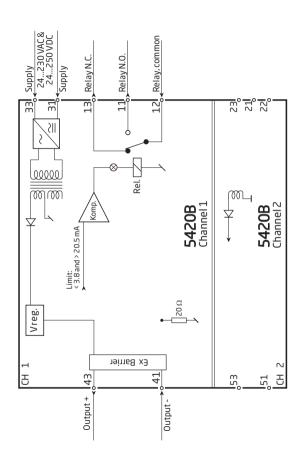



DisplaysProgrammable displays with a wide selection of inputs and outputs for display of temperature, volume and weight, etc. Feature linearization, scaling, and difference measurement functions for programming via PReset software.



Ex interfaces Interfaces for analog and digital signals as well as HART® signals between sensors / I/P converters / frequency signals and control systems in Ex zone 0, 1 & 2 and for some devices in zone 20, 21 & 22.



Isolation Galvanic isolators for analog and digital signals as well as HART* signals. A wide product range with both looppowered and universal isolators featuring linearization, inversion, and scaling of output signals.





Temperature A wide selection of transmitters for DIN form B mounting and DIN rail devices with analog and digital bus communication ranging from application-specific to universal transmitters.





Universal PC or front programmable devices with universal options for input, output and supply. This range offers a number of advanced features such as process calibration, linearization and auto-diagnosis.




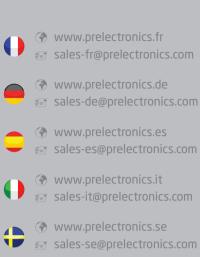









Head office

Denmark PR electronics A/S Lerbakken 10 DK-8410 Rønde

www.prelectronics.com sales-dk@prelectronics.com tel. +45 86 37 26 77 fax +45 86 37 30 85







