

Sensyflow FMT200-ECO2 Thermal Mass Flowmeter

Measurement made easy



Direct mass flow measurement of air

- No additional pressure and temperature compensation required
- Mass flow or standard volume flow measuring values

Wide measuring range of 1:100

High accuracy

Highly dynamic, response time ≤ 90 ms

- Optimized for advanced control systems

Compact design with low weight

No moving parts, no wear, maintenance-free

Arbitrary mounting orientation

Variable process connections

- Flanges, threads, tubes

Variety of output signals

- Current, voltage, frequency, pulse, alarm, parameter setting via RS 232 interface

Approvals for explosion protection (zone 2 and zone 22)

- Manufacturer's declaration according to ATEX

Applications

- Paint robot control (Air dosing)
- Compressed air systems (Balancing, Leakage detection)
- Burner control
- Dosing technology

Contents

1	General information	3
1.1	Principle of operation and construction	3
2	Specifications	4
3	Electrical connections	5
3.1	Cable assignments	5
3.2	Circuiting the signal outputs	5
4	Parameterization	6
4.1	Overview parameterization program Sensyflow FMT200-ECO2	6
4.2	Service and parameterization box.....	7
5	Dimensions	7
5.1	Flowmeter sensor FMT200-ECO2	7
5.2	Accessories	8
6	Ordering information	10
7	Questionnaire	12

1 General information

1.1 Principle of operation and construction

Sensyflow FMT200-ECO2 is a compact, highly dynamic measuring system for mass flow or standard volume flow measurement of air.

The device consists of an easy to install pipe component which accommodates the sensor unit and the evaluation electronics. It directly provides a linearized output signal, and it is calibrated and immediately ready for use.

A standard RS 232 interface allows you to change over between the individual output signals (current, voltage, frequency, pulse and alarm) and to configure the device.

Due to its flexible connection concept this measuring instrument can be installed in pipes or tubes of different types and sizes. Various process adapters are available for this purpose.

A standard power supply unit can be used for powering Sensyflow FMT200-ECO2.

Physics of measurement

Thermal flow metering procedures use different ways to evaluate the flow dependent cooling of a heated resistor as measuring signal.

In a hotfilm anemometer with temperature difference control, the heated platinum resistor is maintained at a constant overtemperature in relation to an unheated platinum sensor inside the gas flow. The heating power required for maintaining the overtemperature depends directly on the flow rate and the material properties of the gas. With a known (and constant) gas composition the mass-flow can be determined by electronically evaluating the heater current/mass-flow curve without additional pressure and temperature compensation.

Together with the standard density of the gas this results directly in the standard volume flow. Considering the high measuring range dynamics up to 1:100, an accuracy smaller than 1 % of the measuring value is achieved.

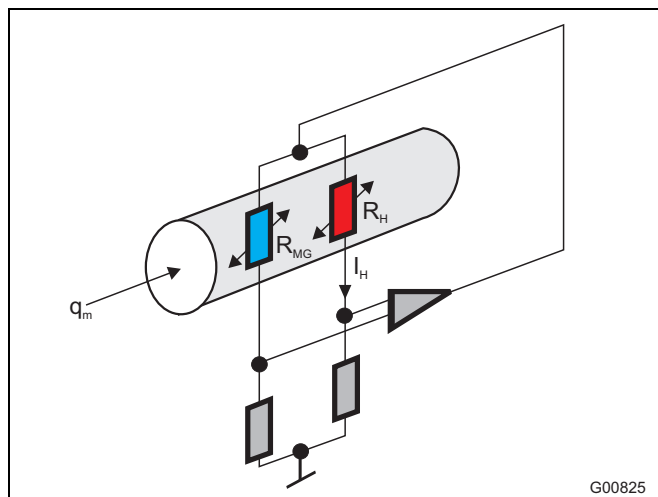


Fig. 1: Analog measuring principle

q_m	Gas mass-flow
R_{MG}	Gas temperature measuring resistor
R_H	Heating resistor
I_H	Actual value of heater

The gas stream flows past two temperature-sensitive resistors R_H and R_{MG} which are part of an electrical bridge circuit. Due to the chosen resistance ratio $R_H < R_{MG}$, R_H is heated by the current I_H , and R_{MG} adopts the same temperature as the gas. The current I_H is preset by the electronic control circuit to produce a constant temperature difference between the heated resistor R_H and the temperature of the gas.

The electrical power generated with resistor R_H exactly compensates its loss of heat to the gas flow. As this loss of heat is dependent on the number of particles which collide with the surface of resistor R_H , I_H represents a measure of the mass flow rate.

2 Specifications

Measuring principle

Thermal: hot-film anemometer

Input

Measured medium

Air

Measuring ranges¹⁾

0 (1) ... 100 kg / h or 0 (12) ... 1250 NI / min²⁾

Output

Analog output signal

0 ... 5 V
0 ... 10 V
0 / 4 ... 20 mA

Load

< 500 Ω

Error indication

< 3.5 mA or > 22 mA

Digital output

24 V, 20 mA

Frequency output

variable 1 ... 2500 Hz

Counter pulse

Pulse evaluation and pulse duration configurable

Alarm values

Minimum and maximum, adjustable

Polarity adjustable

Characteristics

Measured error

< ± 3 % of measured value

Repeatability

< ± 0.5 % of measured value

Response time

$T_{63} \approx 25$ ms; $T_{98} \approx 90$ ms

Influences

Temperature effect

< 0.1 % / K of measured value

Pressure effect

≤ 0.2 % / 100 kPa (/bar) of measured value

Pressure drop

< 10 kPa (100 mbar) at full scale and using the small flange adapter DN 25; decreasing quadratically for smaller flow rates.

Environmental conditions

Ambient temperature for flowmeter sensor

-25 ... 50 °C (-13 ... 122 °F)

Degree of protection

IP 65

Storage temperature

-25 ... 85 °C (-13 ... 185 °F)

Measured medium conditions

Measured medium temperature

-25 ... 50 °C (-13 ... 122 °F)

Measured medium pressure

Standard: 10 x 10² kPa (10 bar abs.)
High pressure version: 16 x 10² kPa (16 bar abs.)

Construction

Weight

0.51 kg (accessories see ordering information)

Material

Flowmeter sensor: aluminium, Hostadur, tinned Cu, glass
Process connections: aluminium
Fittings: aluminium

Process connection

Small flange adapter ISO KF flange;
Threads G 3/8", G 3/4", G 1/2", G 1";
Legris tube adapter, Transair adapter

Electrical connection

Sub-D connector, serie 712, 8-pin, IP 65

Power supply³⁾

Voltage

24 V DC ± 10 %

Power consumption

< 15 W

Current consumption

Peak < 1 A; operation < 0.6 A
Slow-blow fuse of at least 2 A recommended

Communication interface

RS 232

Approvals for explosion protection (zone 2 and zone 22)

Gas: ATEX II 3 G EEx n A II T4 X
Dust: ATEX II 3 D T 135 °C IP 65 X

Accessories (optional)

- Inlet and outlet runs
- Pipe fittings
- Connection adapter
- Quick-clamping connectors
- Reducers
- Power supply unit
- Display unit
- Display and supply unit completely installed in an IP 65 housing

- 1) Approximate values are given for applications with air under atmospheric conditions. The values in brackets indicate the low limit of the measuring range for which the measured value accuracy indicated is specified.
- 2) It is possible to specify any unit which you can transform into a mass or standard volume flow. (Can also be written as: l / min-q_n).
- 3) Power supply with safe electrical separation in accordance with EN 61010 and IEC 950, with max. output power of 150 W.

3 Electrical connections

Please use the supplied cable for the electrical connection of the flowmeter sensor. On the measuring unit, a connector is used for the coupling.

Use a 24 V DC power supply with isolation according to EN 61010 and IEC 950 with a maximum output of < 150 W only.

3.1 Cable assignments

Color of cores	Connector pin number	Signal
White	#1	Analog output +
Brown	#2	RS 232 / TxD
Green	#3	Pulse / frequency output
Yellow	#4	Power supply 24 V DC
Grey	#5	Power supply 0 V
Pink	#6	RS 232 / RxD
Blue	#7	GND / analog
Red	#8	GND / frequency + pulse + RS 232
Shielding	-	Functional earthing

3.2 Circuiting the signal outputs

3.2.1 Analog output

Upon selection, the analog output of the current output supplies an active signal of 0 (4) ... 20 mA, i. e. the Sensyflow FMT200-ECO2 device supplies the current independently.

For this reason, do not use a 2-wire power supply unit or an active input of a PLC, but rather a passive signal receiver.

3.2.2 Digital output

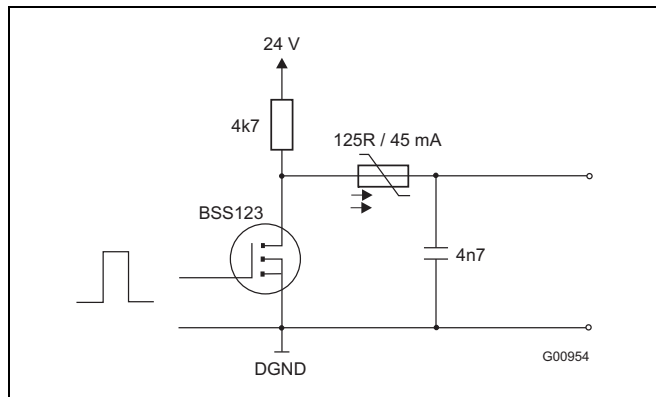


Fig. 2: Digital output

The digital output offers a 24 V = HIGH signal or a 0 V = LOW Signal. The digital output can be used as active or passive output.

Active digital output wiring

The output current in the HIGH-mode must be limited to 1 mA when the active digital output is used (passive signal receiver). This is to ensure an output voltage $U_a > 15 V$.

Passive digital output wiring

Using the passive output (active signal receiver), the output current in the LOW-mode must be limited to -20 mA. This is to ensure an output voltage $U_a < 2.5 V$.

3.2.3 Compatibility to Sensyflow eco1

Sensyflow eco1 und Sensyflow FMT200-ECO2 are compatible. Using the appropriate electrical adapter, FMT200-ECO2 can be connected to existing plants.

As "interface" and "digital output" functionality is not available with Sensyflow eco1, there is no wiring within the adapter for these functions.


4 Parameterization

The Sensyflow FMT200-ECO2 can simultaneously serve one analog output (current 0 / 4 ... 20 mA or voltage 0 ... 5 / 10 V), one digital output (frequency, pulse, alarm) and a serial RS 232 interface.

Additionally, the measuring system can be configured via the serial interface. With this, it is possible to change the output signals or the settings of the measuring ranges and signals by using a standard PC or laptop.

The configuration program is included in the standard scope of delivery. A service and configuration box is available as an accessory part. It will help to connect the different signals of Sensyflow the FMT200-ECO2 quickly and easily.

4.1 Overview parameterization program Sensyflow FMT200-ECO2

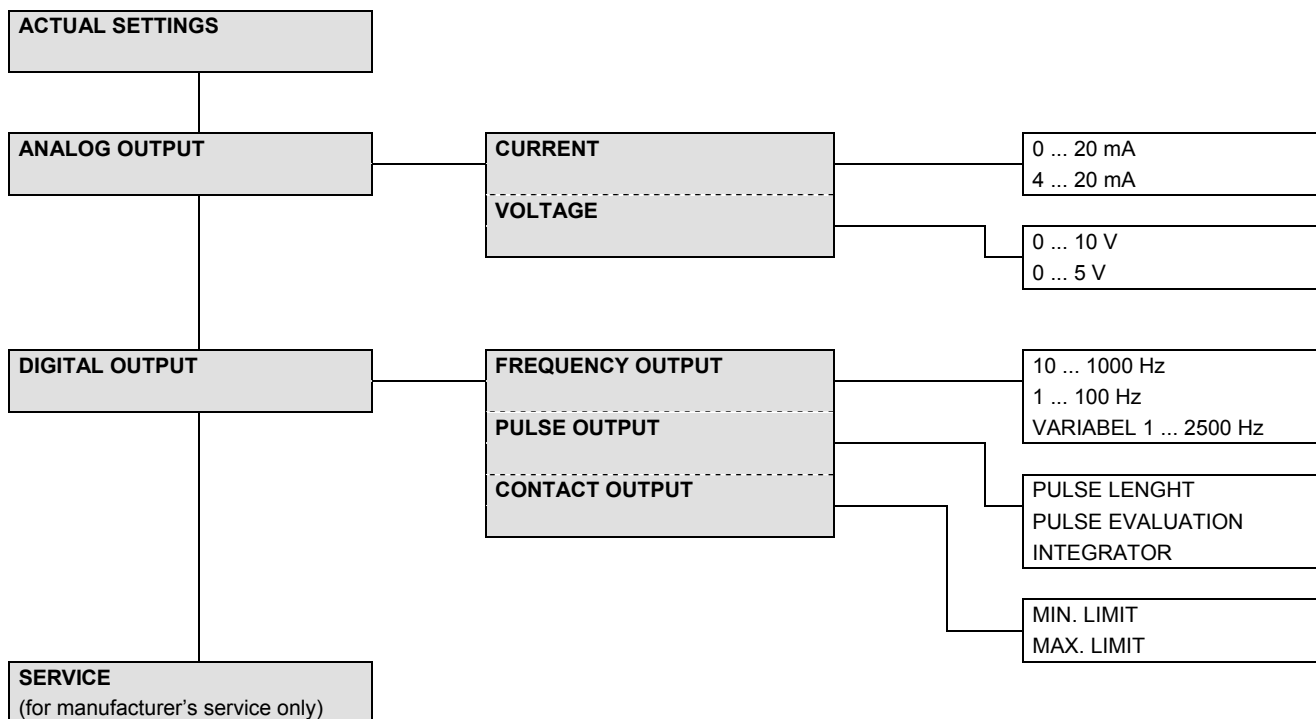

4.2 Service and parameterization box

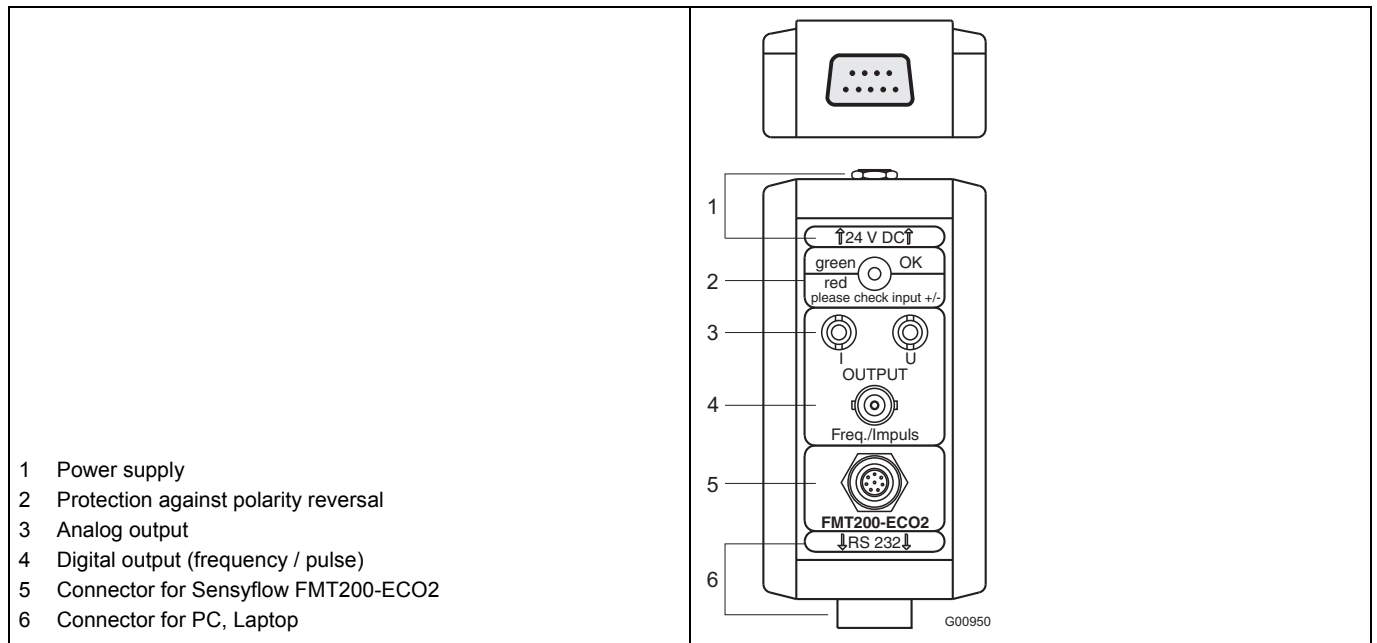


Fig. 3

5 Dimensions

5.1 Flowmeter sensor FMT200-ECO2


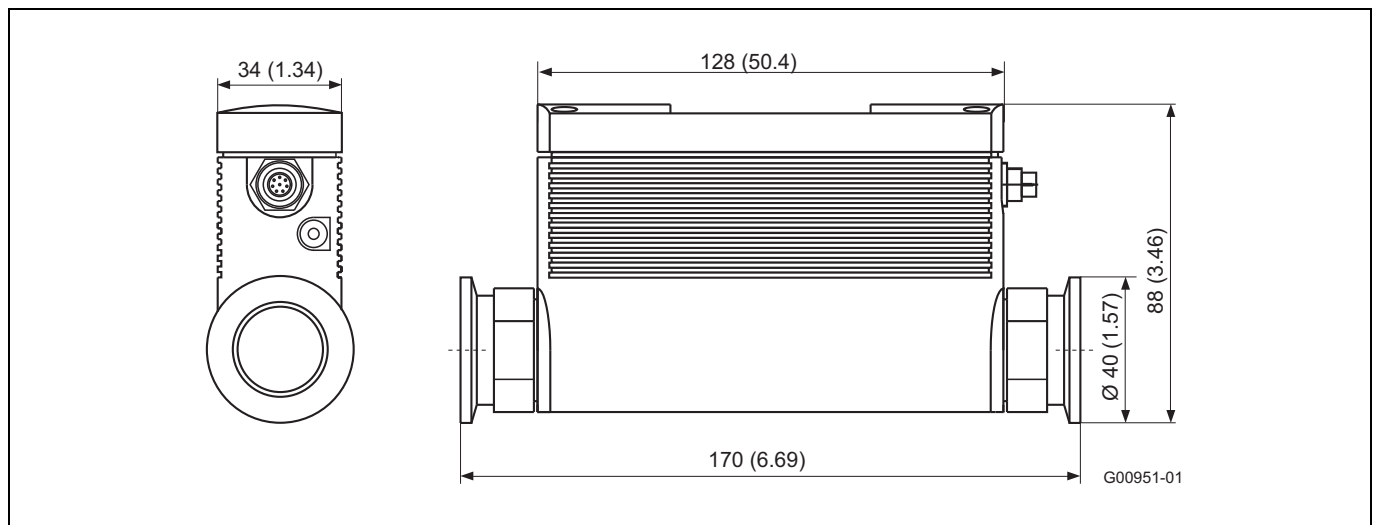


Fig. 4: Flowmeter sensor FMT200-ECO2 with mounted small flange adapter


5.2 Accessories

Small flange connections


KF = ISO KF flange (ISO small flange)

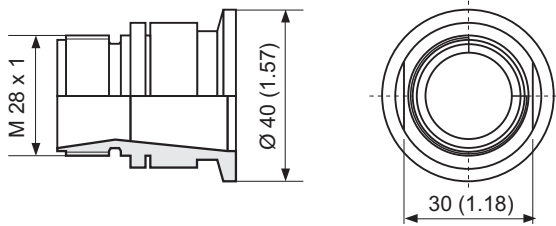


Process adapter flange KF DN 25, inlet run and outlet run, 2 clamp rings and 2 sealing rings

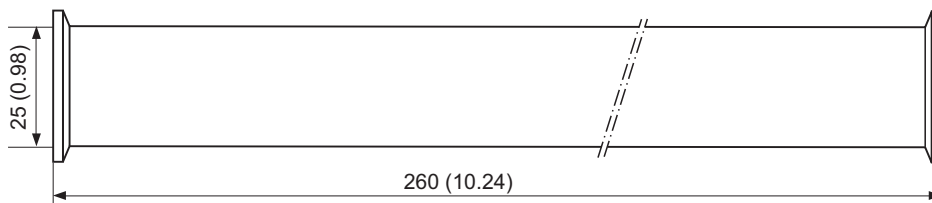

Inlet run length 10 x D, both sides with KF-DN 25 connections

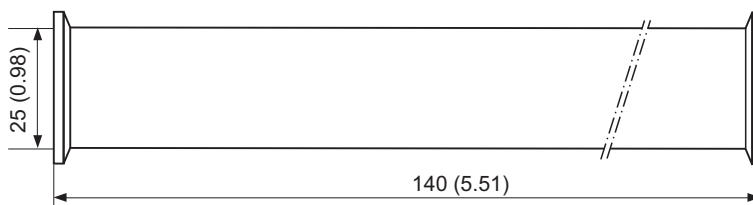

Outlet run length 5 x D, both slides with KF DN 25 connections

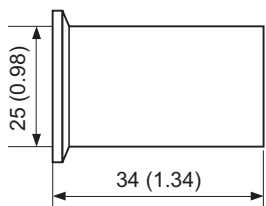

G00952


Hose adapter for KF DN 25, incl. 1 flange, 1 clamping ring and 1 sealing ring

Fig. 5: Dimensions in mm (inch)


Straight undisturbed pipes must be provided as steadying lengths. On the inlet side they should have a length of approx. 10 x D. When using the G 1/2" and G 3/8" adapters no additional steadying lengths are required, as flow-conditioning components are implemented in the adapters on the inlet side.

Note that flow conditioner causes a considerable pressure drop. Components affecting the flow like valves or shut-off devices should be installed on the outlet side, i. e. downstream of the measuring point.


Threads and adapter

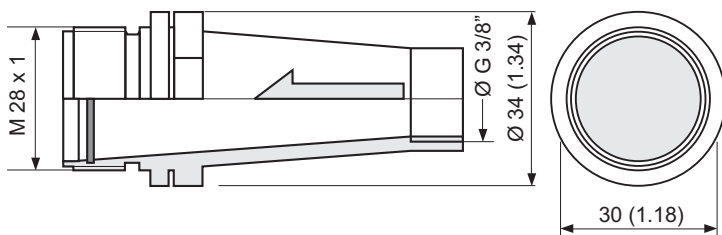


Thread G 3/8", connection for Legris-tube adapters, pair for inlet run and outlet run; inlet run adapter includes a high-tech flow conditioner

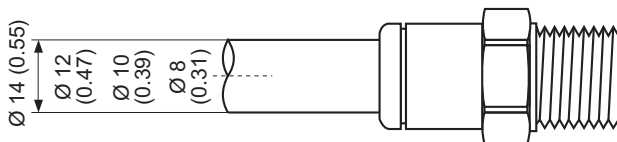


Legris-tube adapter (pair)

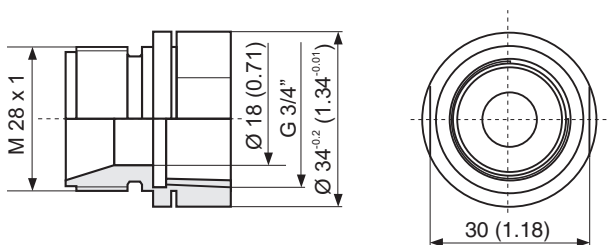


Thread G 3/4", also connection for Transair system 25 mm (pair)

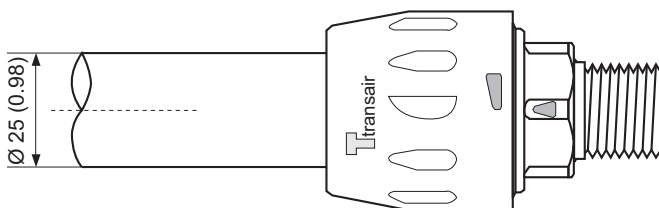

Transair adapter 25 mm (pair)

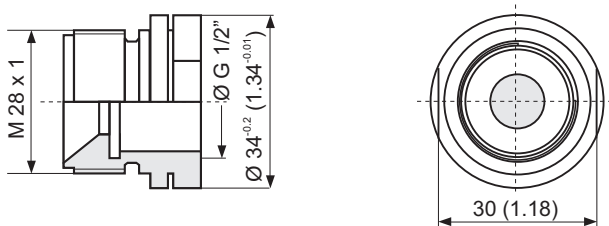

Thread G 1/2" (pair) for inlet run and outlet run. Inlet run adapter includes a high-tech flow conditioner

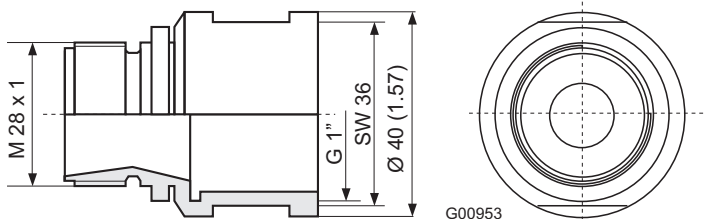

Thread G 1"

Fig. 6: Dimensions in mm (inch)

6 Ordering information

	Haupt-Bestellnummer						Zus. Bestellnr.	
	Variantenstelle	1 - 6	7	8	9	10	11	
Sensyflow FMT200-ECO2 Thermal Mass Flowmeter, for air, compact	V14252		X	X	X	X	X	XX
Calibration Type / Operating Pressure								
Standard calibration 0 ... 100 kg/h (0 ... 220 lbs/h) / Operating pressure 1 ... 10 bar abs. (0.1 ... 1 MPa abs. / 14.5 ... 145 psi abs.)			1					
Standard calibration 0 ... 100 kg/h (0 ... 220 lbs/h) / High pressure version, operating pressure 10 ... 16 bar abs. (1 ... 1.6 MPa abs. / 145 ... 232 psi abs.)			2					
Customer-specific calibration, operating pressure 1 ... 10 bar abs. (0.1 ... 1 MPa abs. / 14.5 ... 145 psi abs.)	1)		3					
Customer-specific calibration, high pressure version, operating pressure 10 ... 16 bar abs. (1 ... 1.6 MPa abs. / 145 ... 232 psi abs.)	1)		4					
Analog Output								
0 ... 5 V			1					
0 ... 10 V			2					
0 ... 20 mA, alarm > 22 mA			3					
4 ... 20 mA, alarm < 3.5 mA			4					
4 ... 20 mA, alarm > 22 mA			5					
Digital Output								
Counter pulse output (high level)			2)	1				
Counter pulse output (low level)			2)	2				
Frequency output, adjustable up to 2500 Hz			3)	4				
Alarm output (alarm = high)			4)	5				
Alarm output (alarm = low)			4)	6				
Process Connection								
1 pair of process adapters KF DN 25 (1 in.), incl. 2 clamping rings and 2 sealing rings						1		
1 pair of threads G 3/8 in., also connection for Legris-section adapters, outlet run adapter includes a high-tech flow straightener						2		
1 pair of threads G 1/2 in., outlet run adapter includes a high-tech flow straightener						3		
1 pair of threads G 3/4 in., also connection for Transair system 25 mm						4		
1 pair of threads G 1 in.						5		
Installed process adapter, KF DN25 (pair), incl. 2 clamping rings- and 2 sealing rings, hexagon socket head cap screw						6		
Version								
Standard							0	
ATEX version for Zone 2 / 22							1	
Certificates: Calibration								
Factory certificate								0
DAkKS certificate of calibration with air (not for process gas calibration)							5)	1
Documentation Language								
German								M1
Spanish								M3
French								M4
English								M5

- 1) Customer specific configuration: measuring range, unit of measure, normalization conditions, upper measuring range value acc. code nos. 110 and 114
- 2) State pulse evaluation with code no. 310. The digital output can have states High = 24 V or Low = 0 V. Please specify the required polarity
- 3) Standard 10 ... 1000 Hz
- 4) State alarm values with code nos. 312 ... 313
- 5) DAkKS / ILAC - accredited calibration equipment D-K-15081-01-00

Accessories	Order number
SMD130 DAkKS calibration for thermal mass flowmeter, certificate of calibration with air, DAkKS / ILAC - FMT power supply, housing for rail mounting 62.5 mm x 75 mm x 139 mm, input 230 V AC, output 24 V DC / 2.5 A	3KXS310130L1001 7962800
FMT200-ECO2 small flange connections FMT200-ECO2 process connections, ISO KF flange DN 25, for adapting inlet run and outlet run, incl. 2 clamp rings and 2 sealing rings FMT200-ECO2 process connections, inlet run section 10 x D, both sides with ISO KF flange DN 25 connection FMT200-ECO2 process connections, outlet run section 5 x D, both sides with ISO KF flange DN 25 connection FMT200-ECO2 process connections, clamping ring and gasket for ISO KF flange DN 25 connection FMT200-ECO2 process connections, tube adapter for KF DN 25, incl. small flange, 1 clamping ring and 1 sealing ring	7962850 7962801 7962802 7962809 7962803
FMT200-ECO2 screwed connections and adapters FMT200-ECO2 screwed connection G 3/8 in., pair for inlet run and outlet run, simultaneous connection for Legris tube adapter; inlet run adapter with high-tech flow straightener FMT200-ECO2 Legris tube adapter, 8 mm, pair for inlet run and outlet run FMT200-ECO2 Legris tube adapter, 10 mm, pair for inlet run and outlet run FMT200-ECO2 Legris tube adapter, 12 mm, pair for inlet run and outlet run FMT200-ECO2 Legris tube adapter, 14 mm, pair for inlet run and outlet run FMT200-ECO2 screwed connection G 3/4 in., pair for inlet run and outlet run, simultaneous connection for Transair system 25 mm; inlet run adapter with high-tech flow straightener FMT200-ECO2 Transair adapter, 25 mm, pair for inlet run and outlet run FMT200-ECO2 screwed connection G 1/2 in., pair for inlet run and outlet run FMT200-ECO2 screwed connection G 1 in., pair for inlet run and outlet run	7962851 7962855 7962856 7962857 7962858 7962853 7962812 7962852 7962854
FMT200-ECO2 installation accessories FMT200-ECO2 additional connection cable, 5 m with compact connector FMT200-ECO2 service and configuration box FMT200-ECO2 intermediate adapter, for connection cable eco 1 on FMT200-ECO2, length approx. 20 cm FMT200-ECO2 mounting adapter for DIN top-hat rail	7962817 7962818 7962819 7962816
FMT200-ECO2 full set FMT200-ECO2 full set, measuring kit FMT200-ECO2 with standard parameterization Instructions for use FMT200-ECO2 operating instruction, English FMT200-ECO2 operating instruction, German FMT200-ECO2 operating instruction, French FMT200-ECO2 operating instruction, Spanish	7962814 3KXF421004R4201 3KXF421004R4203 3KXF421004R4207 3KXF421004R4206

7 Questionnaire



Questionnaire
Thermal Mass Flowmeter
Sensyflow FMT

Customer address: _____
 Company: _____
 Zip code and location: _____ Date: _____
 Cust. no.: _____ Telephone: _____
 Contact person: _____ E-mail: _____

Media data for gaseous, pure media:

Description of media: _____ Mixed gas, gas composition in vol.%¹⁾

Type of gas (no mixtures): _____ Component 1/name/vol. %: _____
 Operating pressure (bar abs.): _____ Component 2/name/vol. %: _____
 Min./norm./max., approx. _____ Component 3/name/vol. %: _____
 Operating temperature (°C) _____ Component 4/name/vol. %: _____
 Min./norm./max., approx. _____ Component 5/name/vol. %: _____

Flowrate²⁾ Min.: _____ Norm.: _____ Max.: _____ **Pipeline/pipe component**³⁾

Flow unit:

	<i>Standard volume</i>	<i>Mass flow units</i>	DN/PN: _____
Nm ³ /h	<input type="checkbox"/>	kg/h	<input type="checkbox"/>
Nm ³ /min	<input type="checkbox"/>	kg/min	<input type="checkbox"/>
NI/min	<input type="checkbox"/>	g/min	<input type="checkbox"/>
SCFM	<input type="checkbox"/>	t/h	<input type="checkbox"/>
Other _____		Other _____	Partial meas. section form 2 <input type="checkbox"/>

*Standard condition, e.g., 0°C/1,013 mbar or _____

ANSI/lbs _____
 Diameter [mm] _____
Inside diameter specified in mm
 Wafer flange form 1
 Weld-on adapter
 Other _____

Required device designs:

FMT500-IG <input type="checkbox"/>	FMT700-P ⁴⁾ <input type="checkbox"/>	Integral mount design <input type="checkbox"/>
FMT400-VTS <input type="checkbox"/>	FMT200-ECO2 <input type="checkbox"/>	Remote design with
FMT400-VTCS <input type="checkbox"/>	FMT200-D <input type="checkbox"/>	Cable length 5 m <input type="checkbox"/>
		Cable length 15 m <input type="checkbox"/>
		Cable length 25 m <input type="checkbox"/>

Output signal: 0/4...20 mA 4...20 mA/HART PROFIBUS DP-V1

Ex protection class: None ATEX Zone 1/21 ATEX Zone 0/21

Design: Zone 2/22 GOST FM/CSA 24 V 110 V 230 V

Comments:

1) Please specify the composition of mixed gases (e.g., North Sea natural gas: 1) CH₄ 90%, 2) C₂H₆ 5%, 3) N₂ 3%, 4) C₃H₈, 1%, 5) CO₂ 1%).
 2) Calibration is performed at the max. possible flow in the nominal size specified.
 3) Please observe/determine the minimum inflow and outflow sections.
 4) Output signal: 0...10 V as standard

Note: An order can only be confirmed and a delivery date specified once full technical clearance has been obtained.

Notes

Notes

Notes

Contact us

ABB Limited

Measurement & Analytics

Howard Road, St. Neots
Cambridgeshire, PE19 8EU
UK

Tel: +44 (0)870 600 6122

Fax: +44 (0)1480 213 339

Mail: enquiries.mp.uk@gb.abb.com

ABB Inc.

Measurement & Analytics

125 E. County Line Road
Warminster, PA 18974
USA

Tel: +1 215 674 6000

Fax: +1 215 674 7183

ABB Automation Products GmbH

Measurement & Analytics

Dransfelder Str. 2
37079 Goettingen
Germany

Tel: +49 551 905-0

Fax: +49 551 905-777

Mail: [vertrieb.messtechnik-
produkte@de.abb.com](mailto:vertrieb.messtechnik-produkte@de.abb.com)

www.abb.com/flow

Note

We reserve the right to make technical changes or modify the contents of this document without prior notice.

With regard to purchase orders, the agreed particulars shall prevail. ABB does not accept any responsibility whatsoever for potential errors or possible lack of information in this document.

We reserve all rights in this document and in the subject matter and illustrations contained therein. Any reproduction, disclosure to third parties or utilization of its contents – in whole or in parts – is forbidden without prior written consent of ABB.

Copyright© 2017 ABB

All rights reserved

3KXF421004R1001



Sales



Service